

Intrepid




HANDBAG DESIGNED BY Pat Bravo



FABRICS DESIGNED BY PAT BRAVO



DAR-64307
DEFYING BUDS AIR

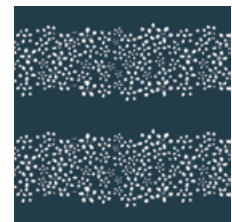

DAR-64310
A PATH OF CERTAINTY



PE-405
CHERRY LIPGLOSS



PE-436
CREME DE LA CREME



PE-440
MACCHIATO

FABRIC REQUIREMENTS

Fabric A	DAR-64307	1 1/8 yds.
Fabric B	DAR-64310	3/8 yd.
Fabric C	PE-405	5/8 yd.
Fabric D	PE-440	1/2 yd.
Fabric E	PE-436	1 1/8 yds.

ADDITIONAL MATERIAL


- One Magnetic Snap
- Fusible Fleece
- Ultra Firm Fusible
- 3/4" x 1" square of brown leather
- Hot Gule Gun




CUTTING DIRECTIONS

1/2" seam allowances are included.

- One (1) Left Front Bag from Fabric **A** and Fusible Fleece
- Two (2) Pocket 1 from Fabric **A**
- One (1) Pocket 1 from interfacing
- Two (2) Pocket 3 from Fabric **A**
- One (1) Pocket 3 from interfacing
- Two (2) Left Big Pocket from Fabric **B**
- One (1) Left Big Pocket from interfacing
- One (1) Right Front Bag from Fabric **C** and Fusible Fleece
- Two (2) Pocket 2 from Fabric **C**
- One (1) Pocket 2 from interfacing
- Two (2) Flaps from Fabric **C**
- One (1) Flap from interfacing
- Two (2) 5" x 33" strips from Fabric **D** (Straps)
- Two (2) 5" x 33" strips from fusible fleece (Straps)
- One (1) 3 1/2" x 10 1/2" strip from Fabric **D** (Strip for Flap)
- One (1) 1" x 8 1/2" strip from Ultra Firm Fusible (Strip for Flap)
- **Note-** For the Left Big Pocket, Pocket 1, 2, and 3 cut two mirrored pieces. (Diagram 1)

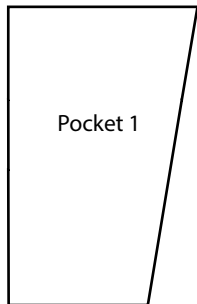

Pocket 1 Pattern Piece

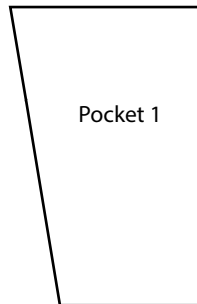

Pocket 1 Mirrored Pattern Piece

DIAGRAM 1

CONSTRUCTION

Sew all rights sides together with 1/2" seam allowance.

- Take all of your mirrored pieces, Pocket 1, 2,3, and Left Big Pocket and iron fusible fleece to the wrong side of the fabric.
- Also iron fusible fleece to the left front bag, the right front bag, one of the flap pieces and both strap pieces.
- Next take the other pocket pieces and sew them right sides together to the pocket pieces with fusible.
- Flip fabric wrong sides together and press flat. Topstitch at 1/2" at the top of your pockets. (Diagram 2.1 and 2.2)

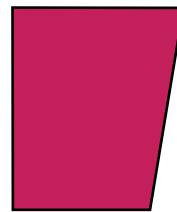


DIAGRAM 2.1

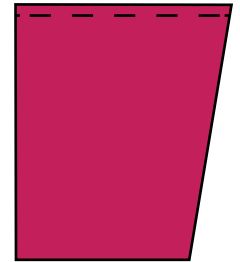


DIAGRAM 2.2

- Place and pin your pockets one on top of the other on top of your right front bag. (Diagram 3)


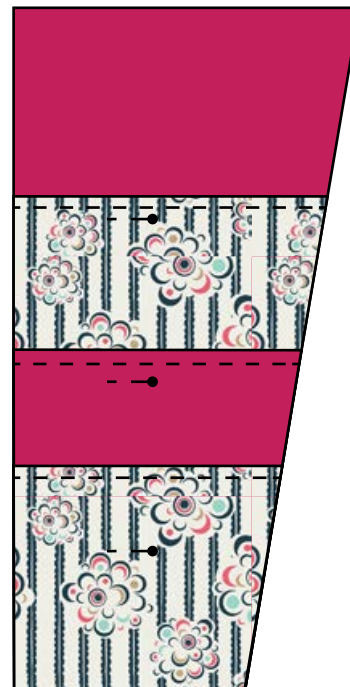


DIAGRAM 3


Applying a Magnetic Snap

Note: A magnetic snap has two main components, a male side & a female side. The magnetic snap also comes with a backing washer for each component. When you purchase a magnetic snap, you will receive 4 metal pieces in total.



- Take your Left Big Pocket and open it up and find the mid point of your piece. Measure 5" down from the seam (Diagram 7) and on the wrong side of the fabric fuse a 1' x 2' rectangle of ultra firm fusible. This is where you are going to attach the female side of your magnetic snap.
- Mark and place a washer on the wrong side of the fabric, 5" down from the seam. Mark with a pencil two lines, from top and bottom tracing inside the rectangles on the washer. (Diagram 4)

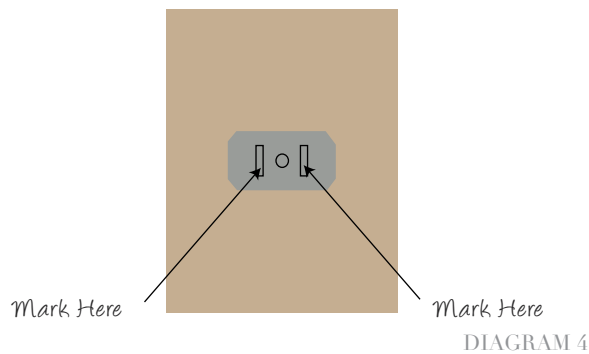


- Remove the washer and make two slits on those marks using a small pair of sharp scissors.
- Place the arms of the female magnetic snap through the slits from the right side of your piece.

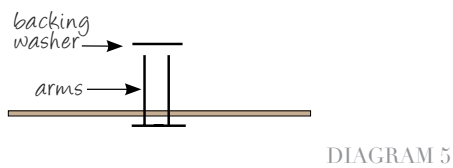


- Put the washer over the arms from the wrong side of the fabric.
- Using pliers, fold each arm of the snap out and down in opposite directions around the washer. Make the arms as flat as possible.

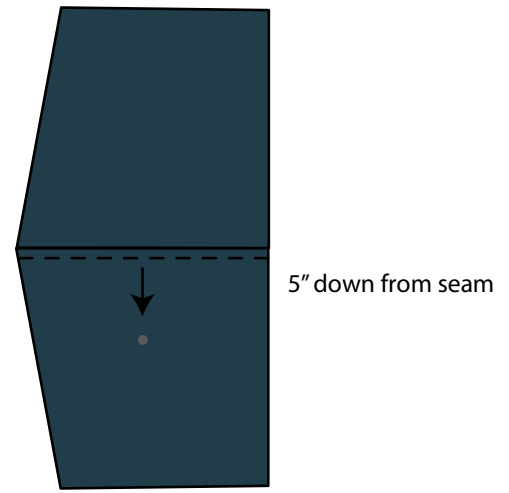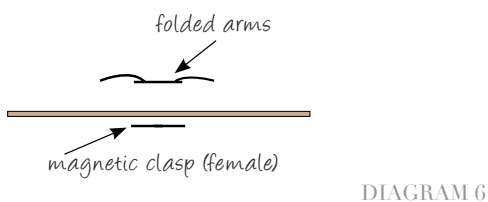

- Now take your left front bag and place and pin the Left Big Pocket following Diagram 8.

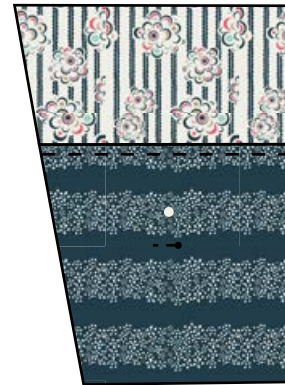

- Next sew the piece created in Diagram 3 and 8 together.

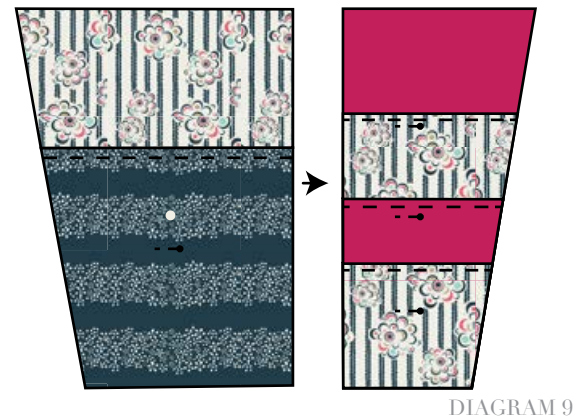

- Sew both flap pieces with right sides together following Diagram 10.1. Leave a small unsewn portion to pull right side of the fabric through. Topstitch about 1/8" around the entire piece. (Diagram 10.2)

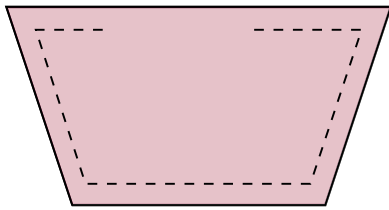


DIAGRAM 10.1

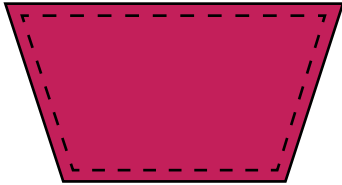


DIAGRAM 10.2

- Take your 3 1/2' x 10 1/2' strip from Fabric D and place your 1' x 8 1/2' ultra firm fusible directly in the middle back and fuse into place. (Diagram 11.1)
- Fold one short end in and press then fold long sides of fabric in at 1/4'. Fold one long end into the middle and the other long end on top. Topstitch around the edge of your piece at 1/8'. (Diagram 11.2 - 11.4)




DIAGRAM 11.1

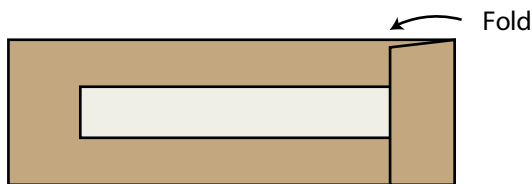


DIAGRAM 11.2



DIAGRAM 11.3

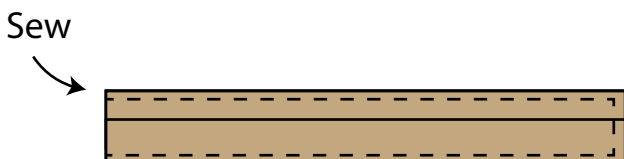


DIAGRAM 11.4

- Place your strip for your flap directly in the center of your flap fold over raw edges to the back side of your flap. Pin in place and sew strip to flap following Diagram 12

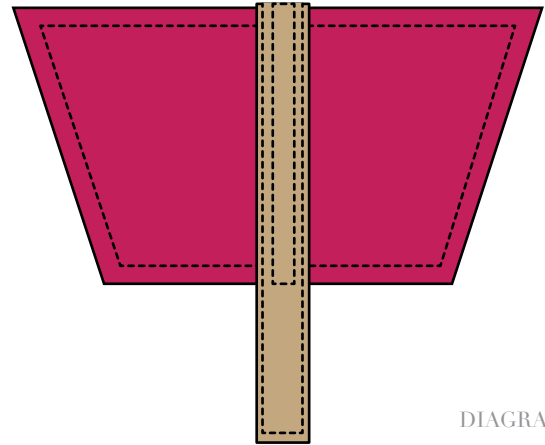


DIAGRAM 12

- Now we are going to apply the male side of your magnetic snap to your strip attached to the flap.
- Pin flap onto Left Front Bag making sure the flap is evenly placed in the middle and lined up with pocket 1. (Diagram 13)

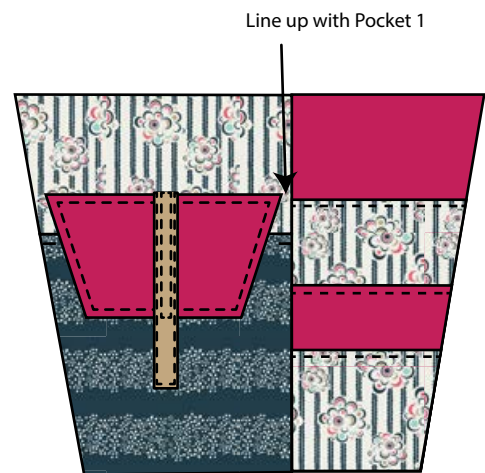


DIAGRAM 13

- Once you have the flap pinned, we need to find out where the strip meets the female side of your magnetic snap and mark.
- Take a 3/4' x 1' piece of brown leather and attach the male side of your magnetic snap following the same process as we did to attach the female side of the magnetic snap.

- Hot glue male side of the magnet to the mark you made on your strip.
- Next topstitch top of flap down at 1/8" and then again at 3/8".
- Your front bag is now complete. Use your front bag as a template to cut your back bag in Fabric **A**. Also cut two more pieces in Fabric **E** for your lining.
- Fuse fusible to wrong side of your back bag and sew front and back bag together.
- Take lining pieces and trim 1/2" off the top. Sew back and front lining pieces together but leave a small unsewn portion to flip the right side of the fabric through.

Straps

- Now take a 5" x 33" strip from Fabric **D**. Fold it in half with right sides together and sew long sides. (Diagram 14.1)
- Sew at 1/2". Turn right side out using a safety pin to inch your way through. Press flat. (Diagram 14.2)
- Press strap so the seam is in the back of your strap.



DIAGRAM 14.1



DIAGRAM 14.2

- Pin the ends of your straps 3 1/2" in from each side seam and stitch in place at 1/4"
- Next place exterior of bag inside lining making sure right sides are touching and that the straps are out of the way. Pin lining to the exterior of the bag and sew all the way around the top of your bag at 1/2" seam allowance.
- Pull exterior of bag through the unsewn portion in the lining.
- Handstitch or machine stitch unsewn portion.

Happy Sewing

#PatBravoDesign




To see more patterns, fabrics and lots of inspiration visit:

patbravo.com


NOTE: While all possible care has been taken to ensure the accuracy of this pattern, we are not responsible for printing errors or the way in which individual work varies. Please read instructions carefully before starting the construction of this quilt. If desired, wash and iron your fabrics before starting to cut.

© 2015 Courtesy of Pat Bravo All Rights Reserved.

Pocket 1




Tape pattern pieces at notches.

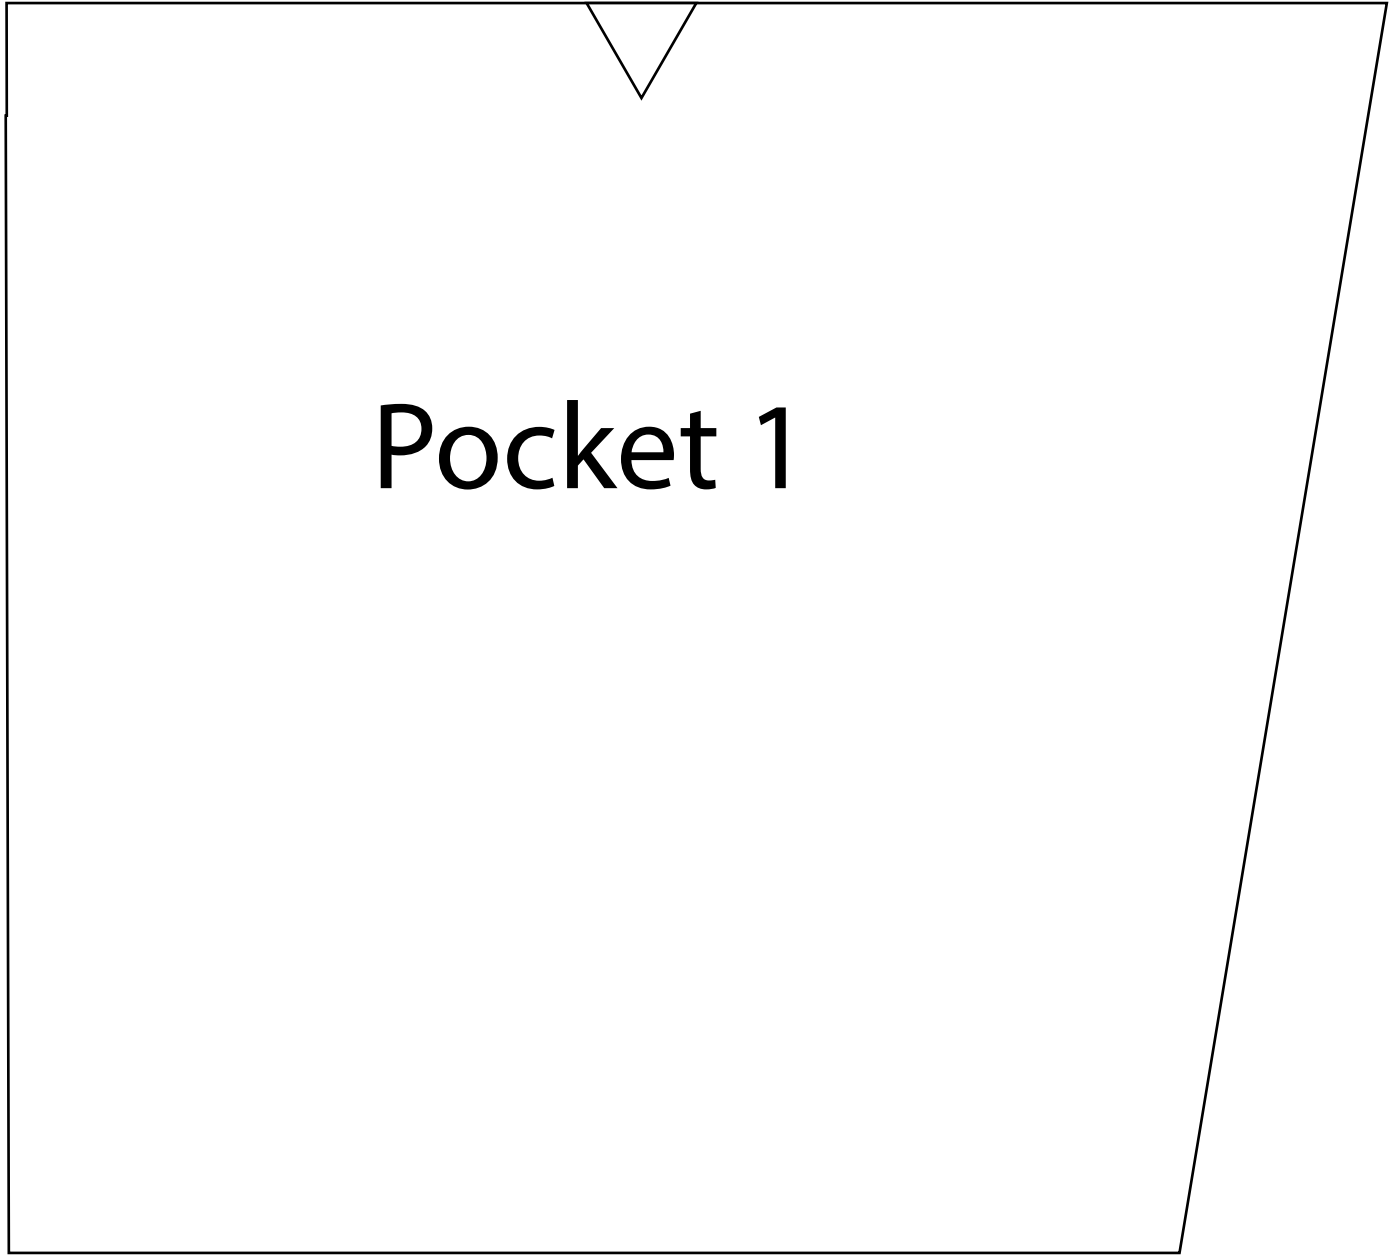

Pocket 2

Pocket 3

Tape pattern pieces at notches.

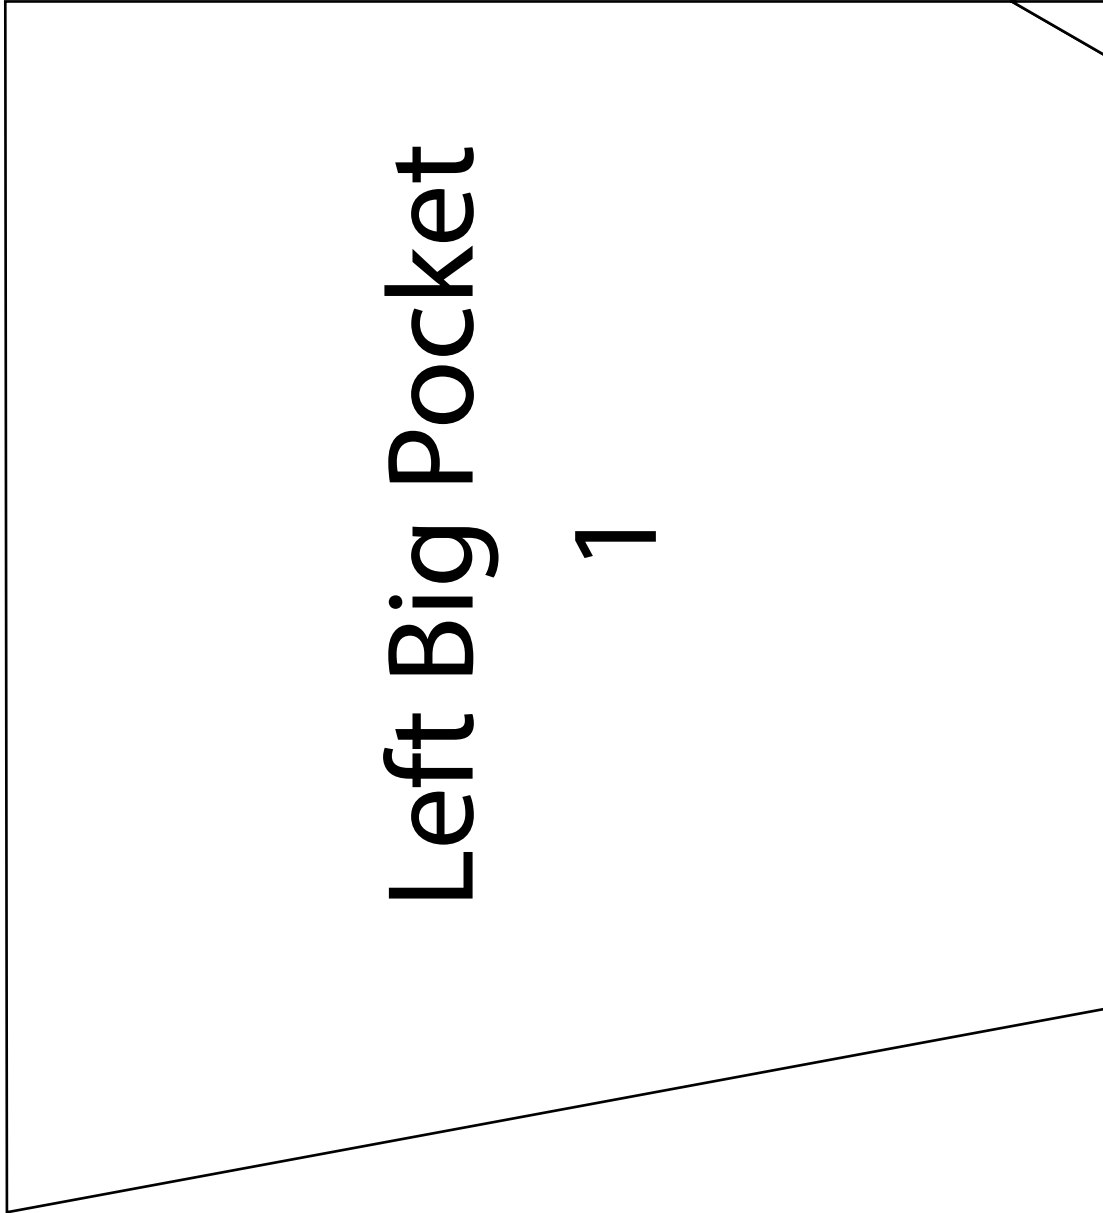


Tape pattern pieces at notches.

Left Big Pocket


2

Tape pattern pieces at notches.

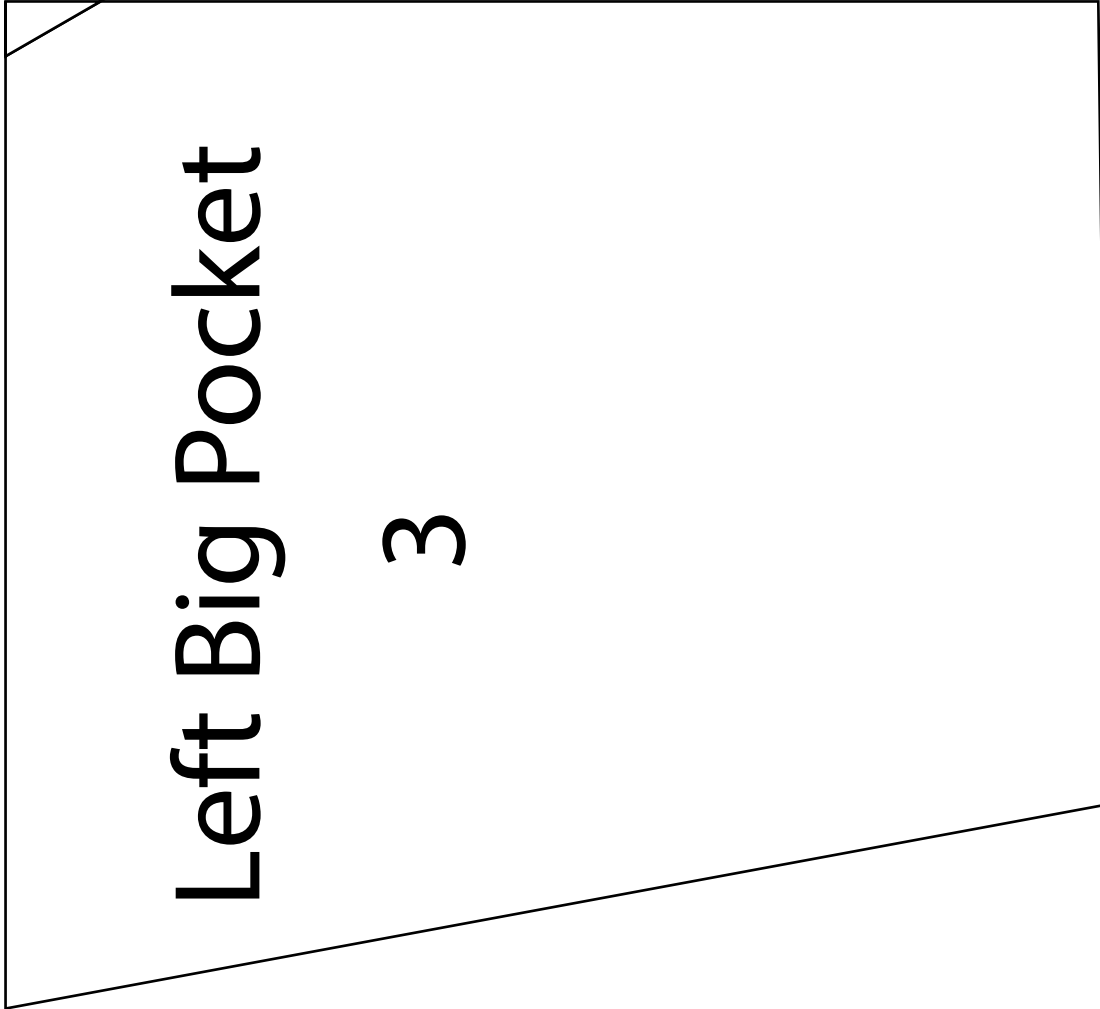

Left Big Pocket

4


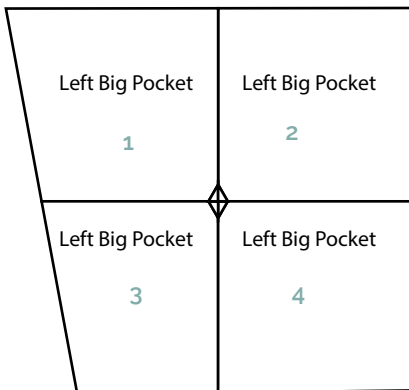


Tape pattern pieces at notches.


Tape pattern pieces at notches.


Right Front Bag

1

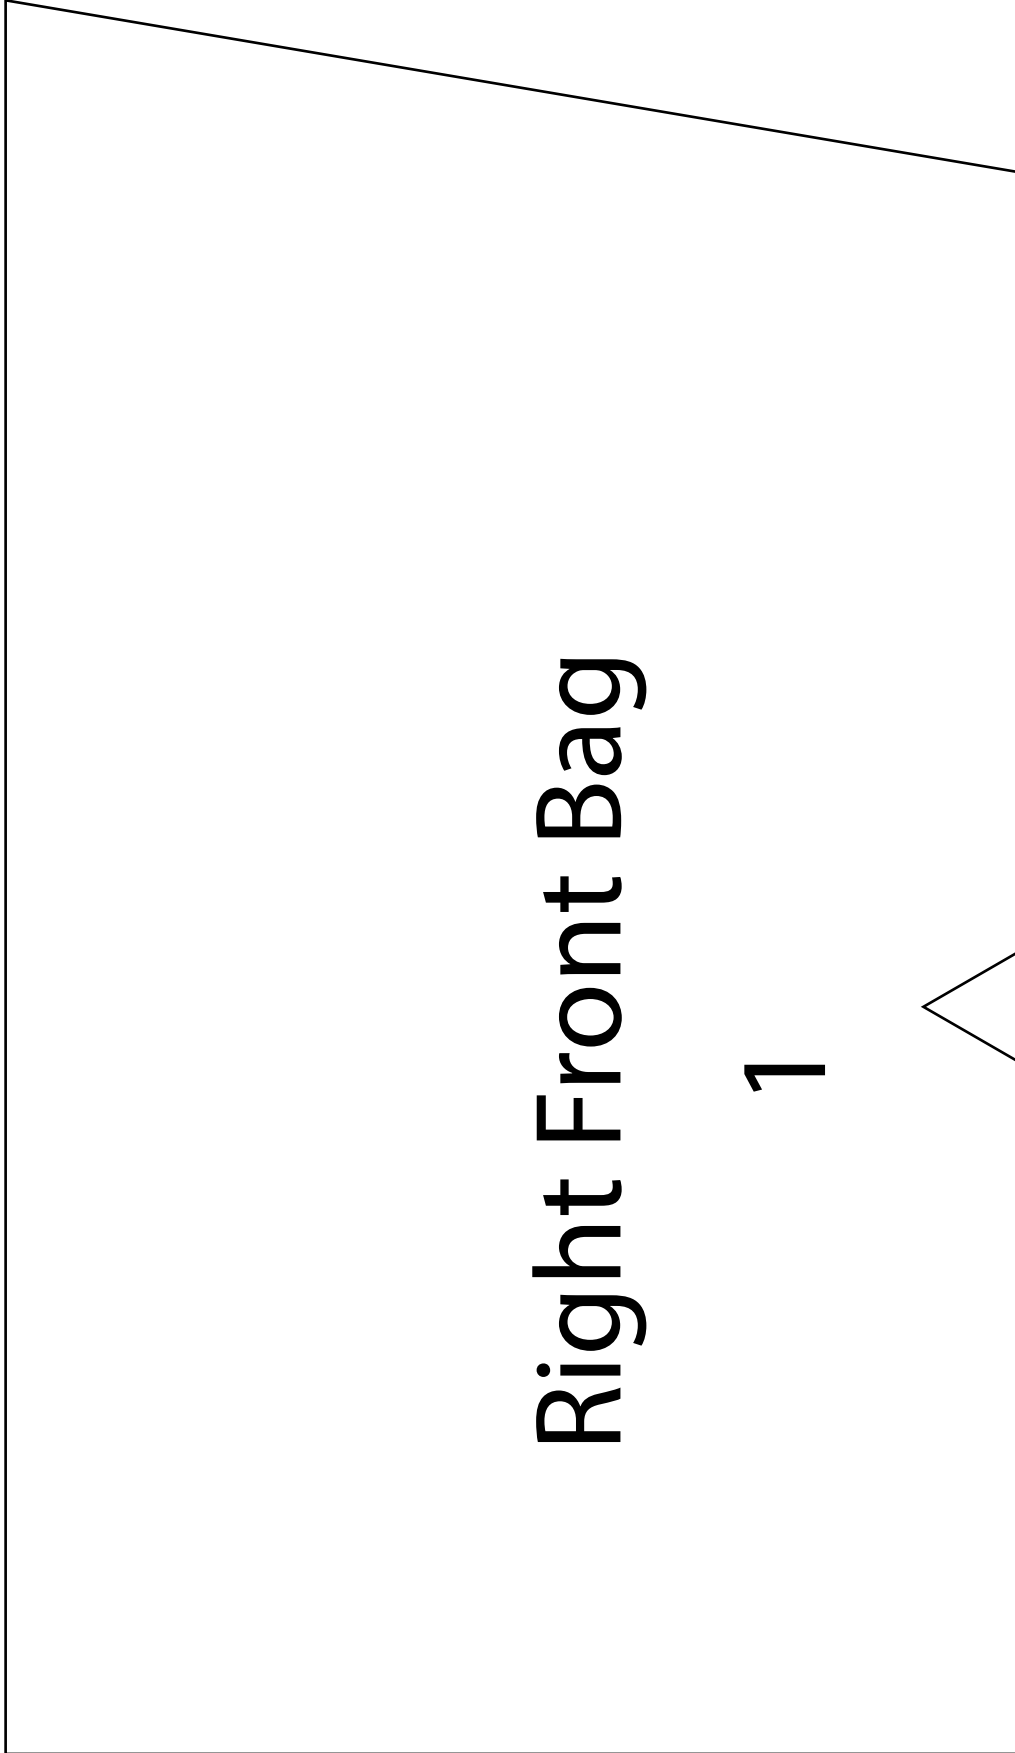


Tape pattern pieces at notches.

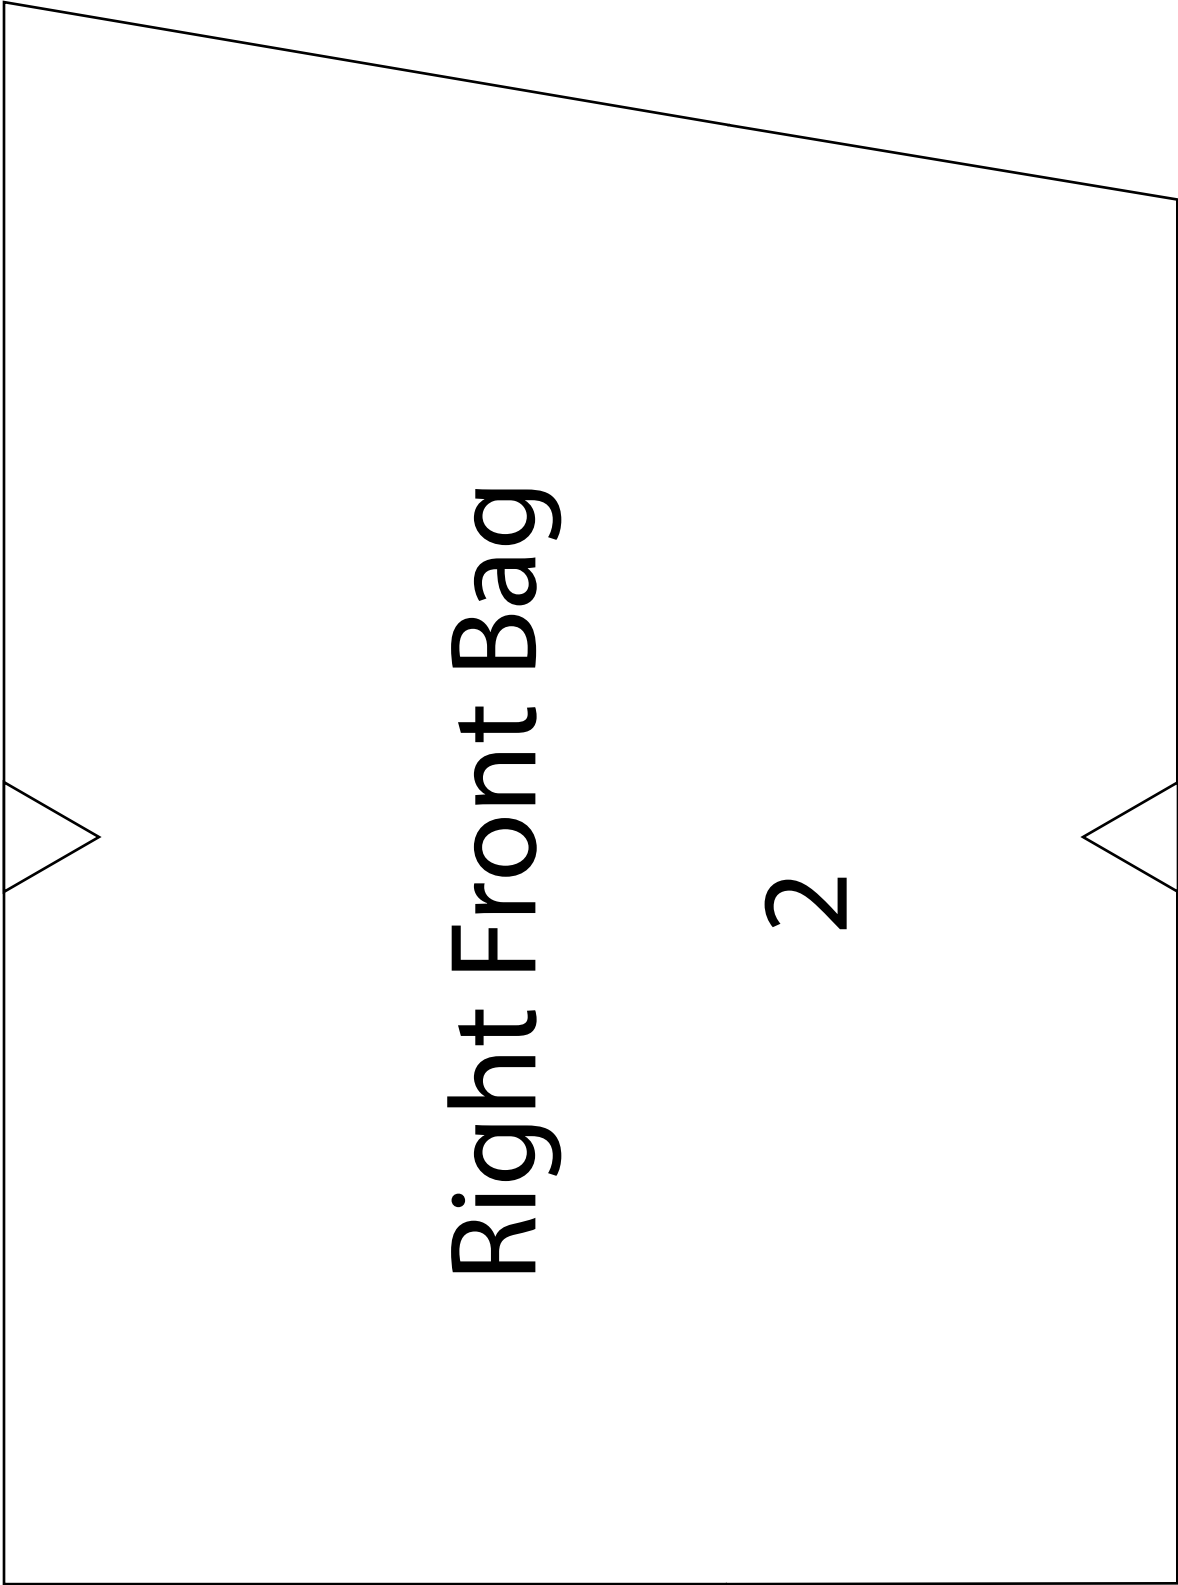



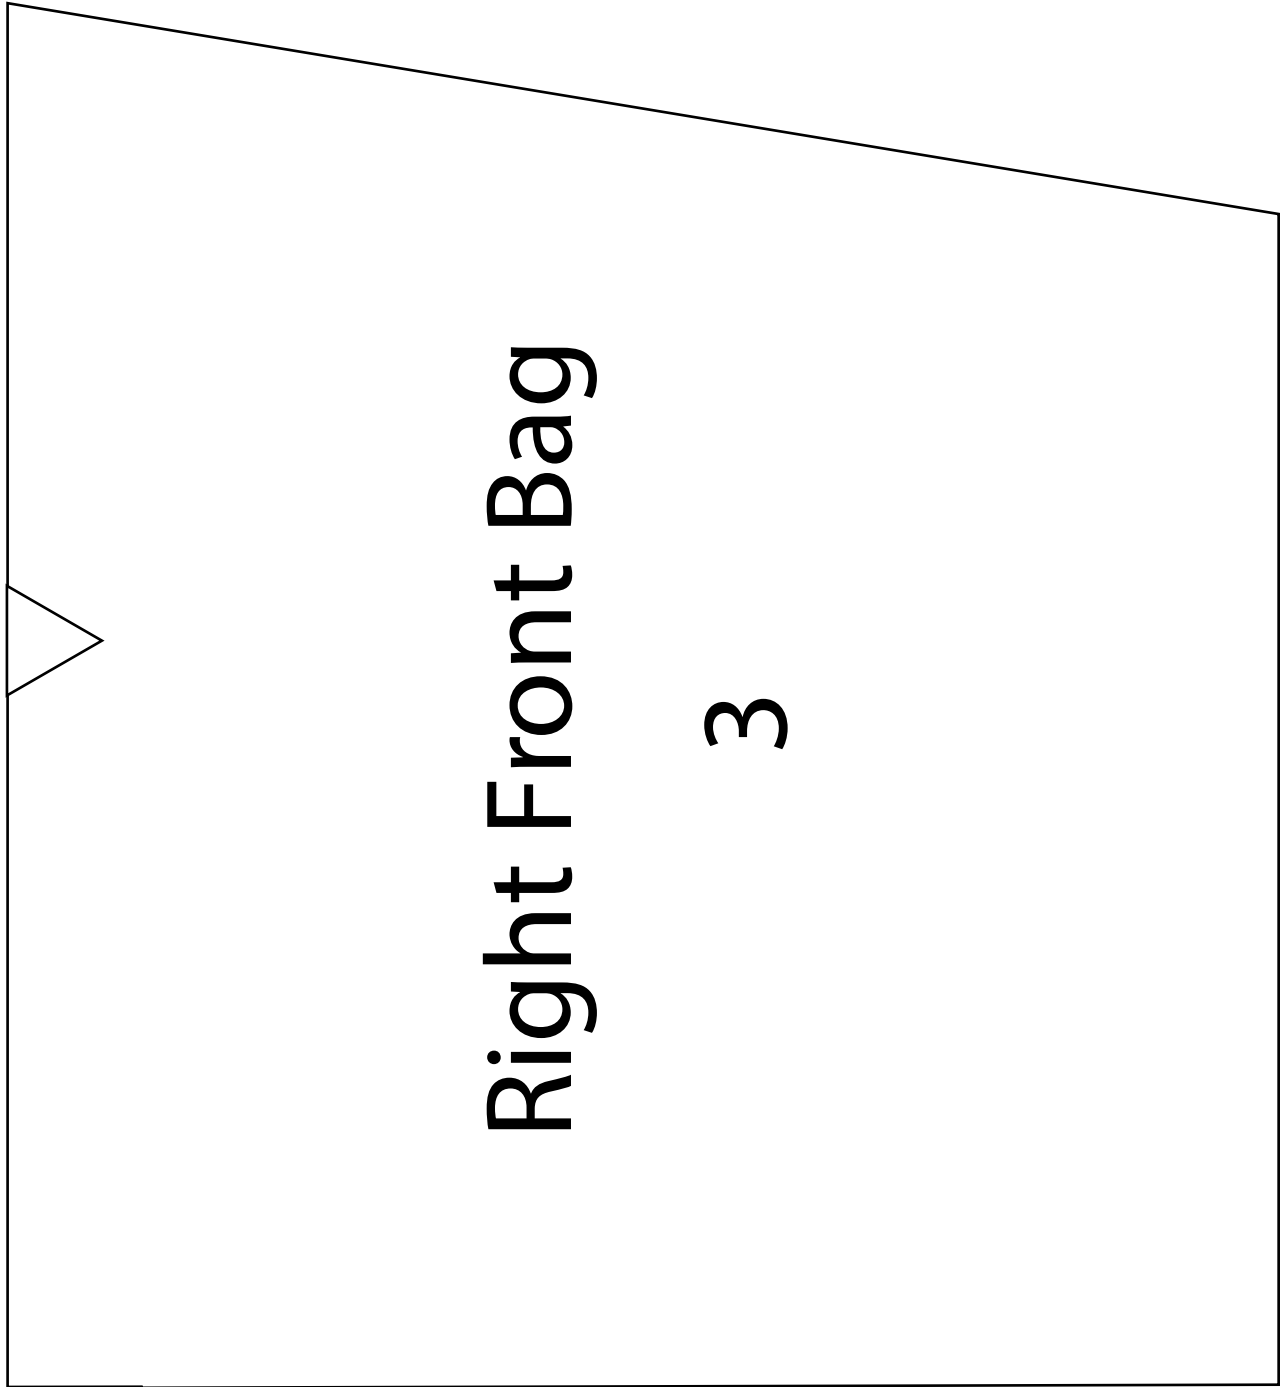


Tape pattern pieces at notches.

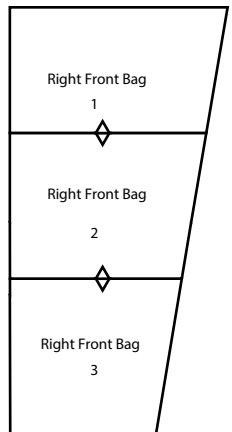

Tape pattern pieces at notches.

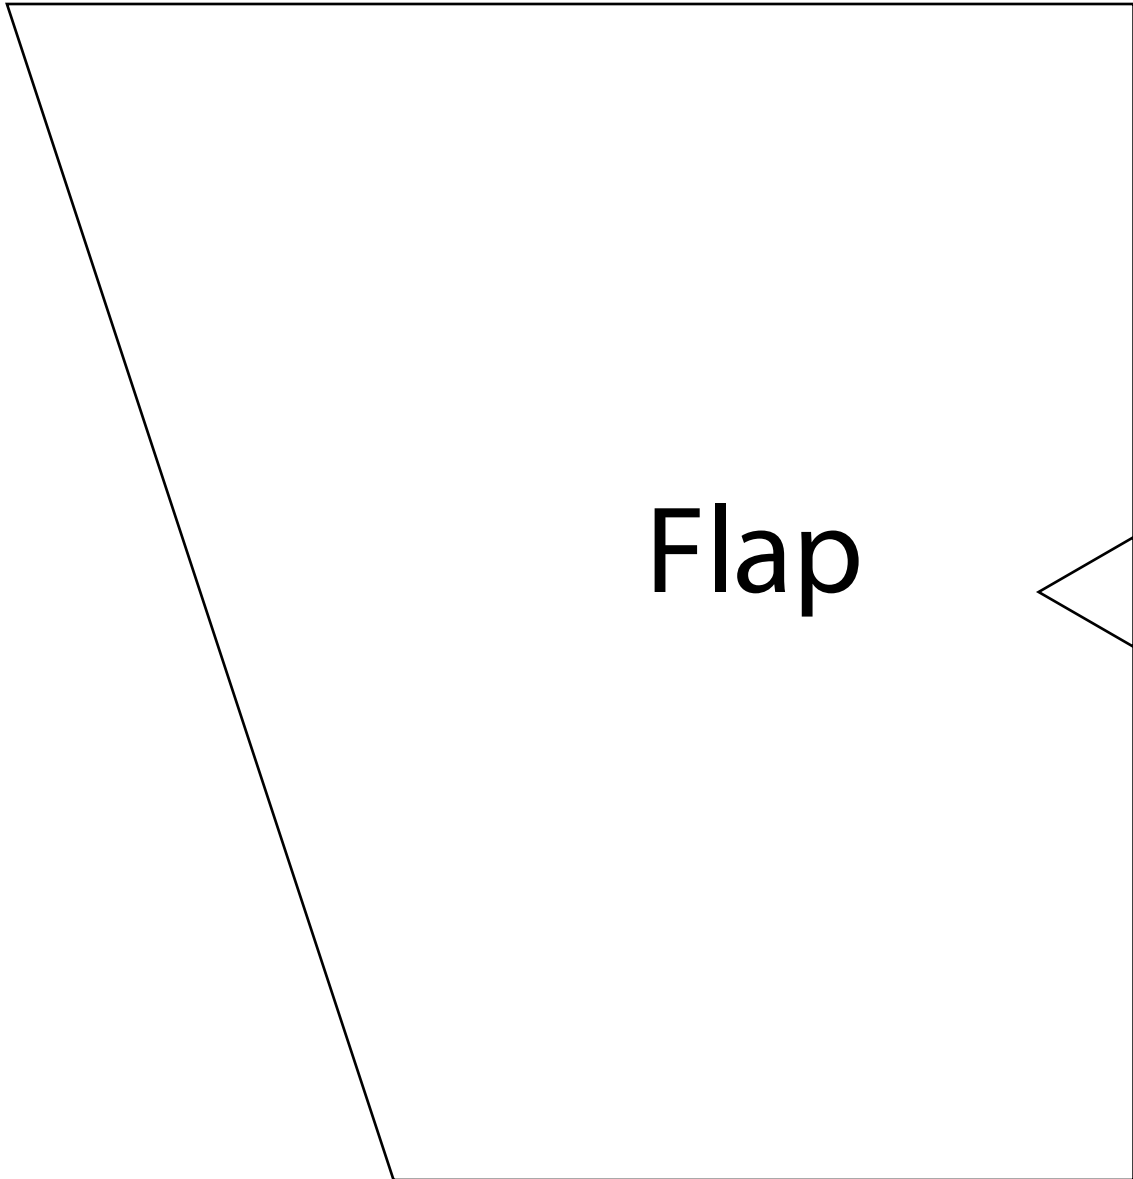

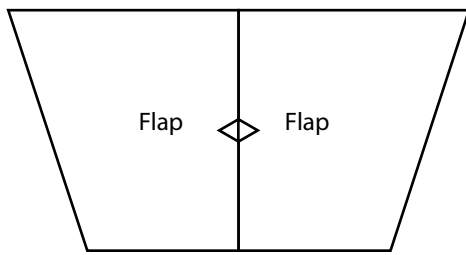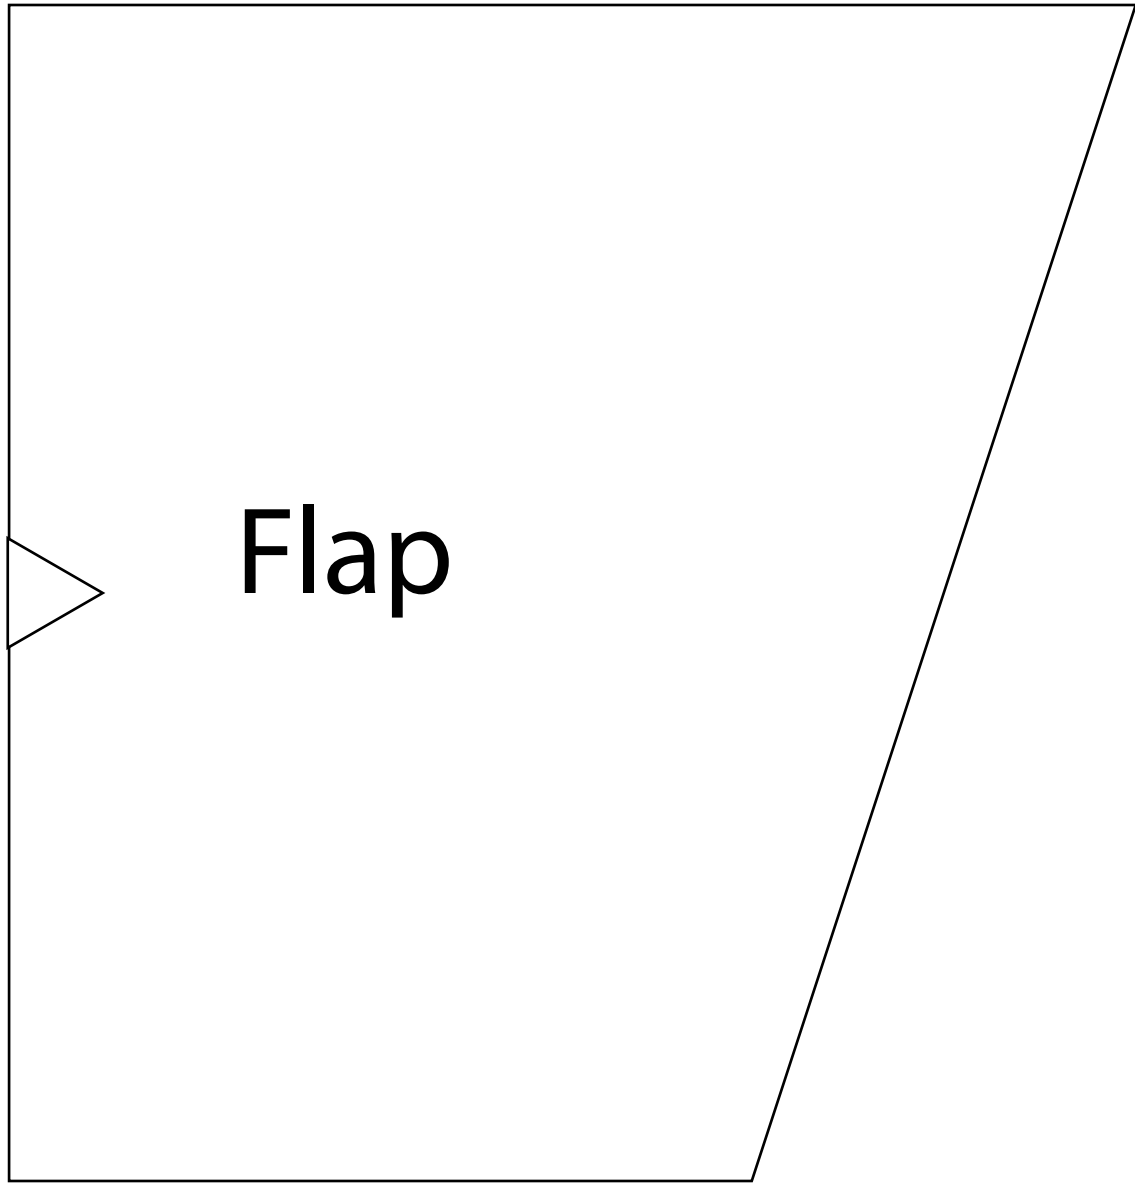


Tape pattern pieces at notches.

Left Front Bag

1

Left Front Bag

2



Match Flap up here

Left Front Bag

3

Left Front Bag

4

